

Remove the primary clutch and use the supplied bolt through this hole in the crank end.

